

The start relays provided with HOMA 1-phase pumps have changed.  
This document will explain the differences.

HOMA 1-phase pumps use three terminals: 1, 2, and 5.  
The new relay has five terminals, but terminals 4 and 6 are not used.



**New**



**Existing**

The new relay uses a slightly different style mounting bracket.



**New**



**Existing**