

## Technical Pages

All HOMA single phase TP, A and GRP Series pumps utilize externally wired capacitors. Your pump may be provided with a start capacitor and one or two run capacitors along with a potential relay. This document will help you wire the external capacitors to the pump.

### PROCEDURE

Wire **Z2** is the connection to the start winding.

Wire **U2** is the connection to the run winding.

Wire **U1** is the common connection for both windings.

