

Technical Pages

ABSTRACT

It is important to use the correct lift point when installing a pump, so that the pump will seat correctly and not bind on the guide rails during retrieval. This document will show the correct lifting points for GRP pumps

PROCEDURE

For both standard and tall stainless steel lifting handles, the correct lifting point is the same, as shown below.

Standard



Tall Stainless



IMPORTANT! DO NOT lift from the rear tab of the standard handle. The pump will bind on rails during retrieval

