


Technical Pages

---

ABSTRACT

The start relays provided with HOMA 1-phase pumps have changed. This document will explain the differences.

HOMA 1-phase pumps use three terminals: 1, 2, and 5.  
The current relay has five terminals, but terminals 4 and 6 are not used.

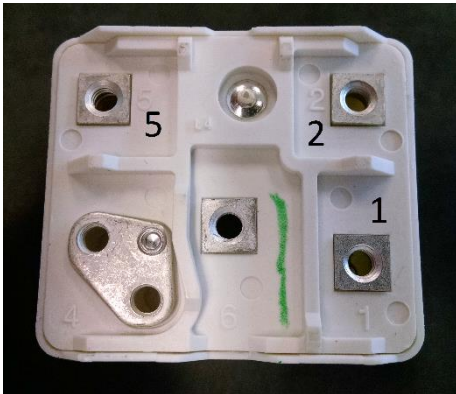


**Current**




**Old**

The current relay uses a slightly different style mounting bracket

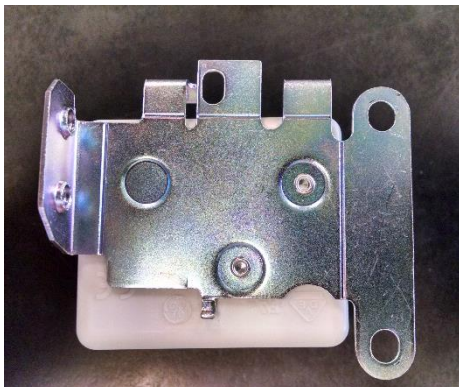

**Current**

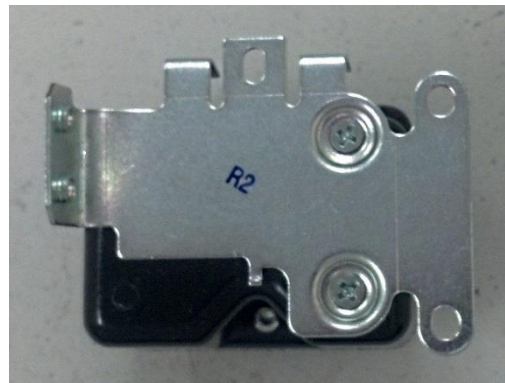

**Old**